



### Installation requirement

When you install bolt lock on the glass door which is without frame, you need plug box and U-bracket for installation.

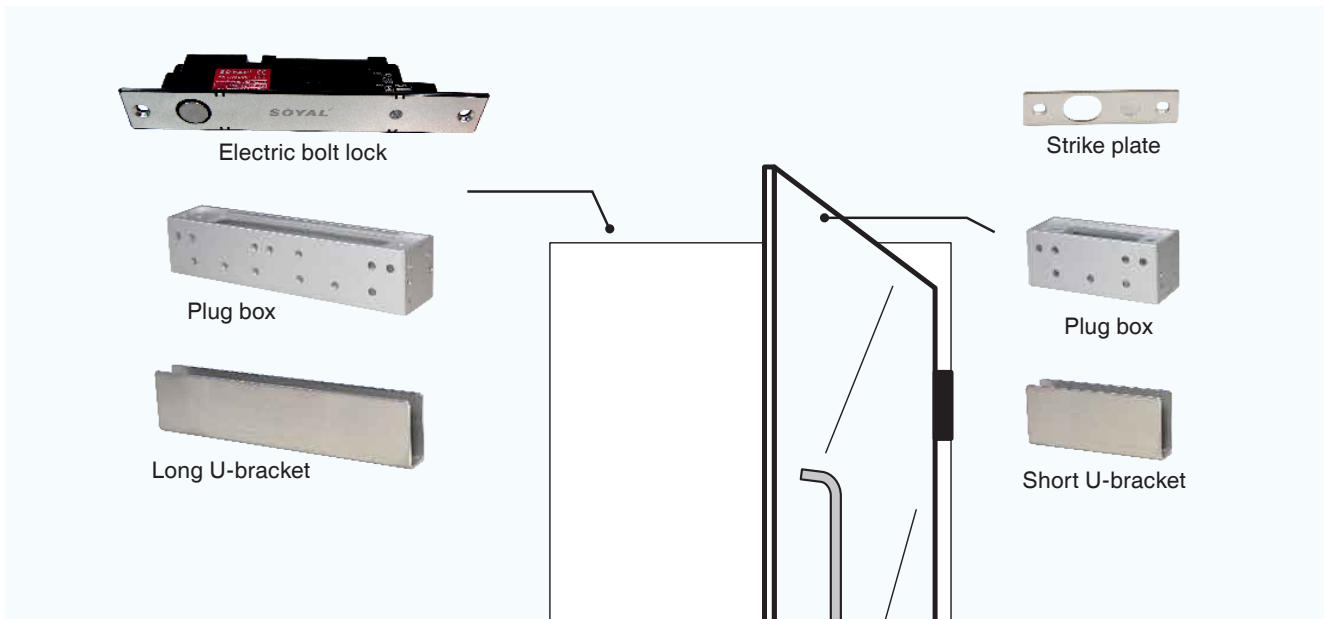

### Installation Steps

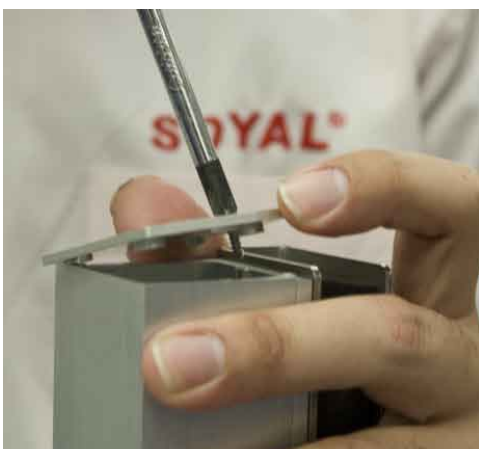


#### Step 1.

Unload the side cover of long plug box.



#### Step 2.

Push out the top cover

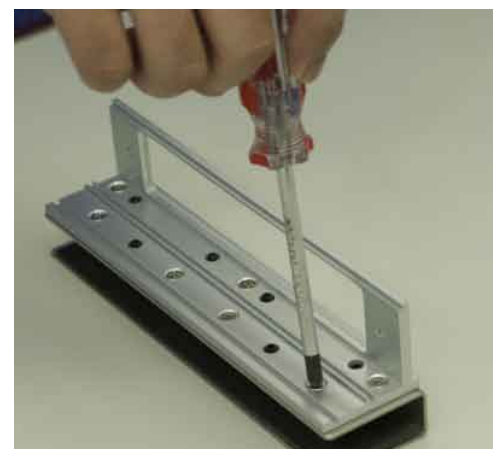

#### Step 3.

Screw long plug box on U-bracket



#### Step 4.

Screw Allen screw into plug box (This Allen screw is used to tighten glass, so you may just screw in a little bit)



#### Step 5.

Unload the side cover of short plug box.



#### Step 6.

Push out the top cover



#### Step 7.

Screw short plug box on short U-bracket.



#### Step 8.

Screw Allen screw into plug box (This Allen screw is used to tighten glass, so you may just screw in a little bit)



#### Step 9.

Screw the strike plate on short plug box



#### Step 10.

Use Allen key to tight the long U-bracket and plug box on the glass frame



#### Step 11.

Install the bolt lock into plug box.



#### Step 12.

Use screwdriver to punch wire hole on side cover.



**Step 13.**

Pull out the bolt lock wire from wire hole



**Step 14.**

Push back the top cover



**Step 15.**

Screw the side cover on long plug box



**Step 16.**

Close the door. Make sure the position of strike plate is right and then screw the short U-bracket on door (Including strike plate and plug box)



**Step 17.**

Push back the top cover



**Step 18.**

Screw the side cover on short plug box.